


PU Balls pitching Machine

ZH-13801BH

Please keep these instructions well


Parts content Please check all accessories are intact before assembly.

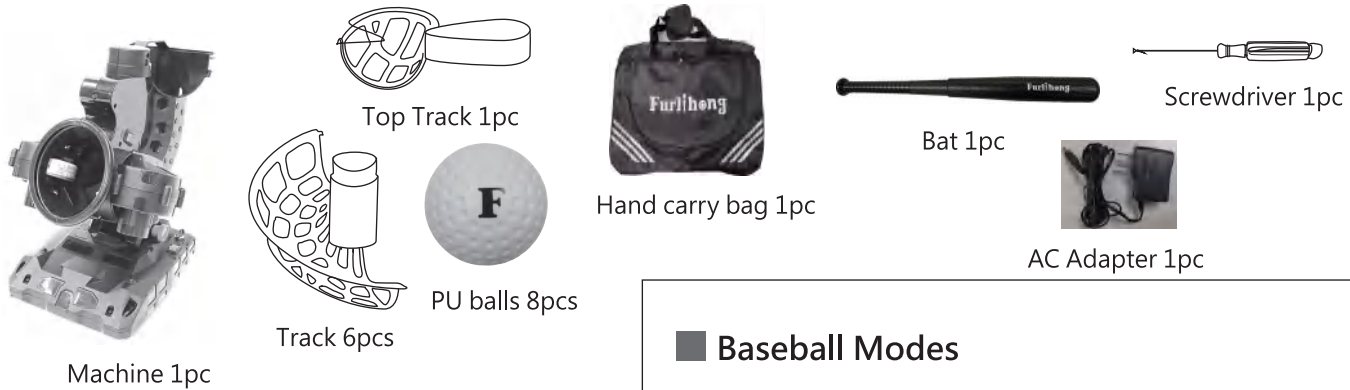


Assembly Instructions

Machine and tracks connection assembly required to be performed by adults

- 1 Connect Track 1 to the machine.
- 2 Connect track 2 to track 1 and so on if necessary.
- 3 Connect the Top Track

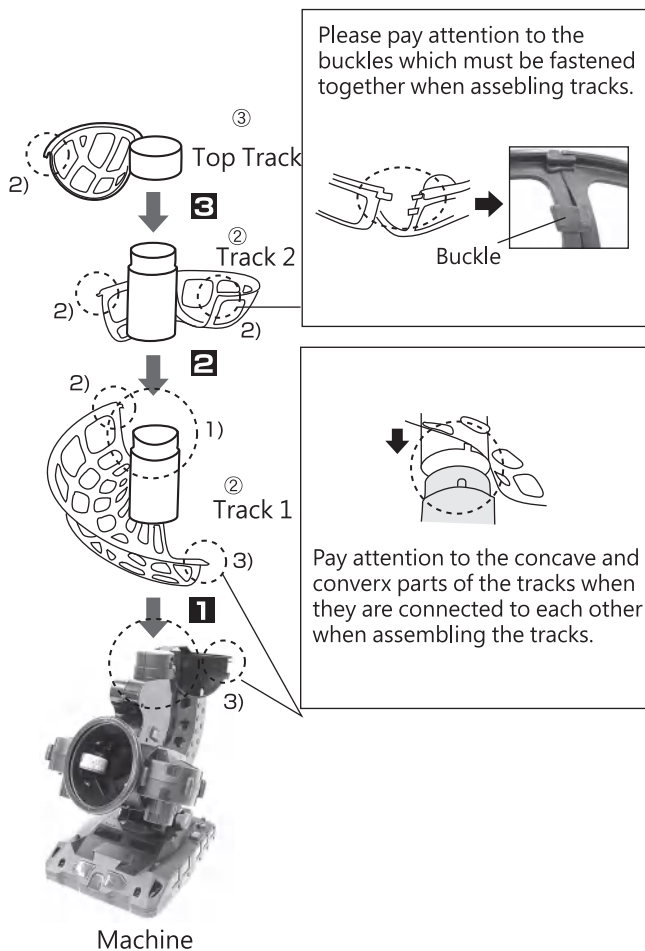


Baseball Modes

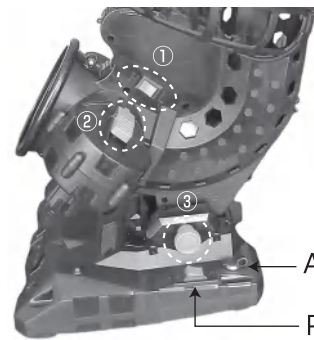


- 1 Left & right wheel launch speed adjustment switch
- 2 Left and right wheel launch angle adjustment switch
- 3 Machine angle adjustment knob


1 Left & right Wheel launch speed adjustment switches
Perform hook ball by adjusting speed as shown

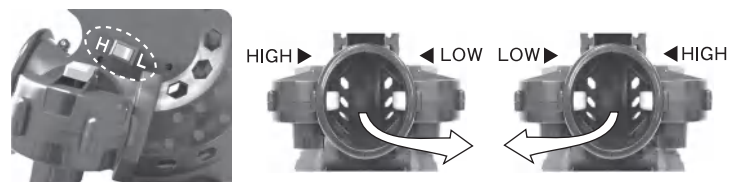


2 Left & right wheel launch angle adjustment switches
Perform curve ball by adjusting angle as shown

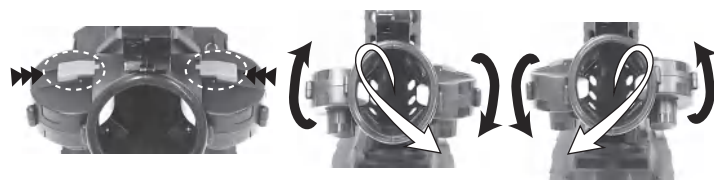

3 Angle adjustment knob
Adjust the angle by pulling the knob, Ensure properly once angle chosen. 4 angle adjustment available

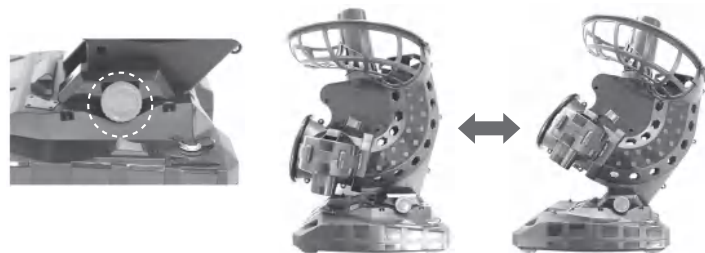


■ Battery Box
The battery box located at the bottom of machine

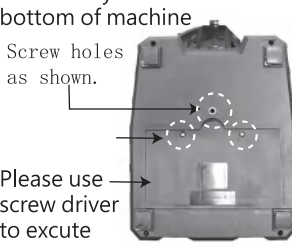

Screw holes as shown.

Please use screw driver to excute

Adjust track shape

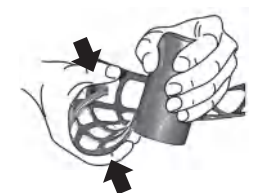

Please squeeze gently the tracks if tracks out of shapes

 
Tripod Connectivity

you can secure the machine on camera tripod. The screw hole on the bottom of the machine is compatible with a standard camera tripod.



■ How to assemble the batteries

- Please assemble the battery according the positive " + " and negative " - " .




- Please slide door cover back and tighten screws after assembling.

⚠ Precautions for battery installation

- The battery installation must be performed by adult.
- Do not mix different types of batteries.
- Do not mix new and old batteries.
- Remove batteries if not used machine for a long time.
- Please install " + " and " - " properly.

■ Stand to the side of the machine near pwoer switch.

- Please make sure there are no balls in the ball launcher before turing the machine on.

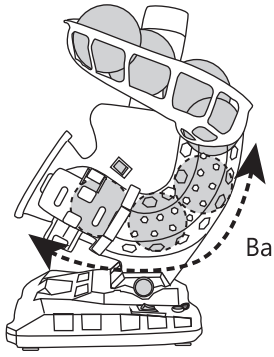


Ball launcher

- Make sure turning off machine before taking balls out of machine.

Pull out the extending bat and fasten the connection in order to play .



■ Ball launch distance 4~13m

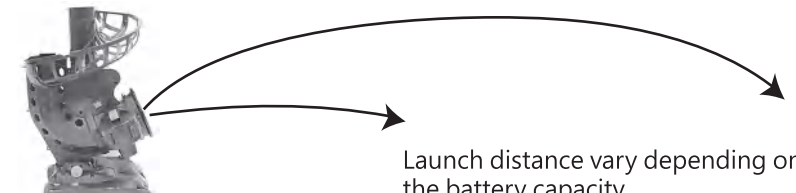

Launch distance vary depending on the battery capacity.

■ Optional product

Furlihong 9-Inch Sting-Free Dimpled Baseballs



⚠ NOTE

- Do not use in the rain , or near dust,salt spray.
- Do not wet the machine and battery box, AC adaptor.
- Ensure use the machine in wild space at least 13m.
- Do not stand in front of the ball launcher when in operation.
- Do not place heavy object above machine.
- Do not use this product for other purposes.
- Do not place machine near high temperature. Stay away from fire.
- Wipe and clean machine after finished training session.
- Children must play under adults supervision.
- Do not let face and hands approaching the laucher when in use.
- Do not disassemble this product, may cause malfunction.