

BATTING TRAINER TOSS

BATTING TRAINER TOSS MACHINE

ZH-698BH

Kindly be sure all parts fine before assembling Installation and user manual

Parts list



Base unit 1



AC adapter 1



Top of carriage 1



Ball carriage 2



Connecting partial 1



Ball 6

Technical Details

Item Dimensions LxWxH...7.9x26x13.4inches

Weight...2 kilograms

Material ...Plastic


Power setting...AC-100 ~ 240V adaper
or 8"D"size batteries(not included)

Feed time...5~6 second per tossing


Recommended ages...7+

Parts detail

<Base unit front>

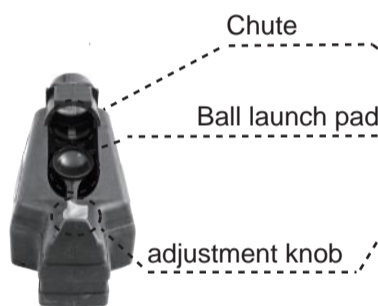

<Base unit side>
top of carriage

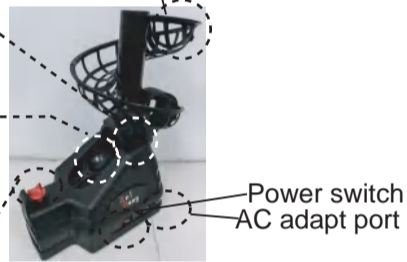

<Base unit back>

Connecting Partial



<Base unit bottom>
Battery holder



Feature

- Adjust distance and height by using adjustment knob.
- Please don't place the ball on launch pad before power switched.
- 5~6second per tossing

Beware damp enviroment

Assembly instruction

A



Align the base unit and press firmly the connecting partial onto the base.

B



Top of carriage

Assemble the two sections of the ball carriage by inserting one carriage column into the other.

Ball carriage 1

Insert the tabs from ball carriage onto top of carriage then press firmly down onto the connecting partial.

User instruction


Please place the ball on ball carriage and switch on power.
Adjust weak and strong by adjustment knobbing.

■ Adjust distance

Increases distance by turning clockwise.
Decreases distance by turning counterclockwise.




※ Kindly notice ball categories has various result

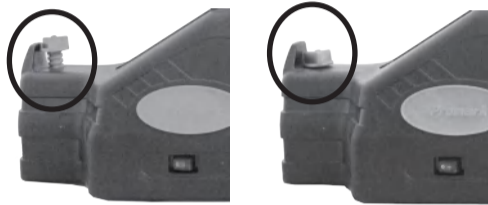

■ Tossing height

Decreases height by pulling up the knob.
Increases height by pressing down the knob.

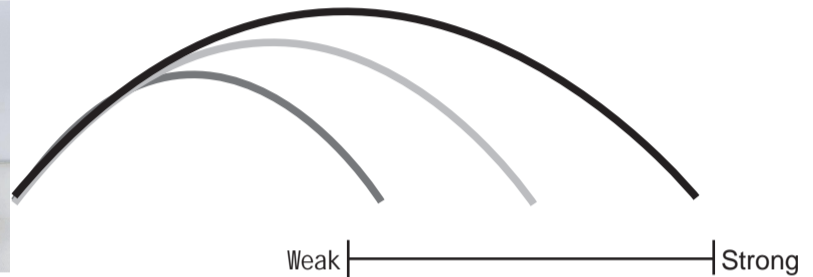


NOTE

- ! Be sure to turn power off before plug in AC adapter.
- ! Please don't plug in AC adapter and batteries at the same time.
- ! Please don't turn on once any cords damaged.
- ! Please unplug the AC adapter/batteries once training session finished and keep dry.

Battery installation

- Be sure to turn power off before installing batteries.

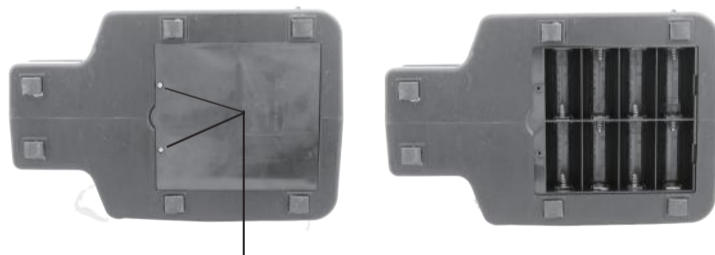

Remove screws and slide door to open. Insert batteries as shown.



Please replace new batteries once below happens.

- Tossing distance decreases.
- Getting unceasingly louder motor noise

⚠ Battery installation note

- Adult assembly and Supervision required.
- Beware positive and negative installation.
- Do not mix alkaline, standard, etc.
- Take off batteries once it's in storage
- Keep product and batteries dry.

kindly follow Installation note and stay from getting overheat or spilled.



NOTE

- Please don't use product on raining days.
- Please keep it dry.
- Do not use it on wet surface.
- Adult assembly and supervision required.
- All person(s) not batting should stand behind the pitching machine.
- Do not use the product for any other purpose or with any other object.
- If the product jams, turn machine to "OFF" position.
- Keep product away from high temperature or any fire place.
- Please clean product once training session finished.