


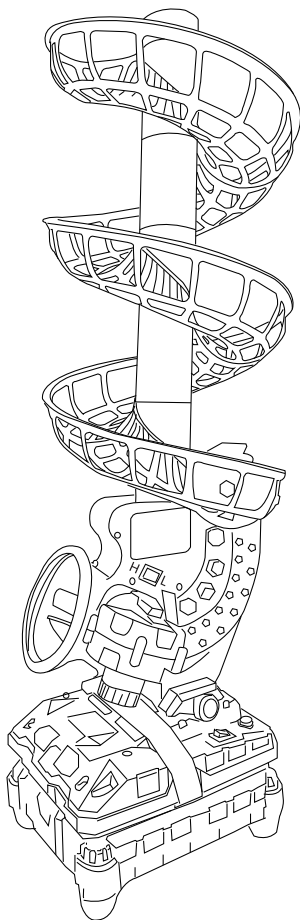

PICKLEBALL MACHINE

INSTRUCTION MANUAL

ZH-3802PBH



Please read the user manual carefully before using this product and keep it properly.

CONTENT

PRECAUTIONS -----	1
SPECIFICATION -----	1
PARTS DESCRIPTION-----	2
PACKAGE CONTENT-----	2
INSTALLATION -----	3
MACHINE INSTALLATION-----	3
SWING BASE INSTALLATION-----	4
DRY BATTERIES INSTALLATION-----	5
FEATURES -----	7
BASIC TROUBLESHOOTING -----	10
WARRANTY & CUSTOMER SERVICE -----	11
WARRANTY-----	11
CUSTOMER SERVICE-----	11

PRECAUTIONS


Thank you very much for choosing Furlihong. Before using your Furlihong pickleball machine, please take a moment to review the following important safeguards to ensure safe and optimal operation:

- Do not use it in the rain or near dust or salt spray.
- Avoid getting the machine and battery box wet.
- Ensure the machine is used in a wide-open space of at least 13 meters.
- Children must play under adult supervision.
- Keep your face and hands away from the launcher when it's in use.
- Do not disassemble this product, as it may cause malfunction.
- Do not stand in front of the ball launcher when it's in operation.
- Do not place heavy objects on top of the machine.
- Use this product only for its intended purpose.
- Keep the machine away from high temperatures and fire.
- Wipe and clean the machine after each training session.



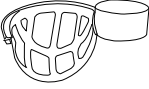
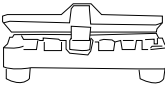
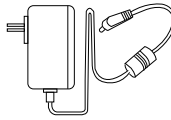
 

SPECIFICATION

Name	Pickleball Machine
Model	ZH-3802PBH
Size	32" x 11" x 10"
Weight	7.4 lb
Rated Voltage	6V
Rated Power	15W

PARTS DESCRIPTION

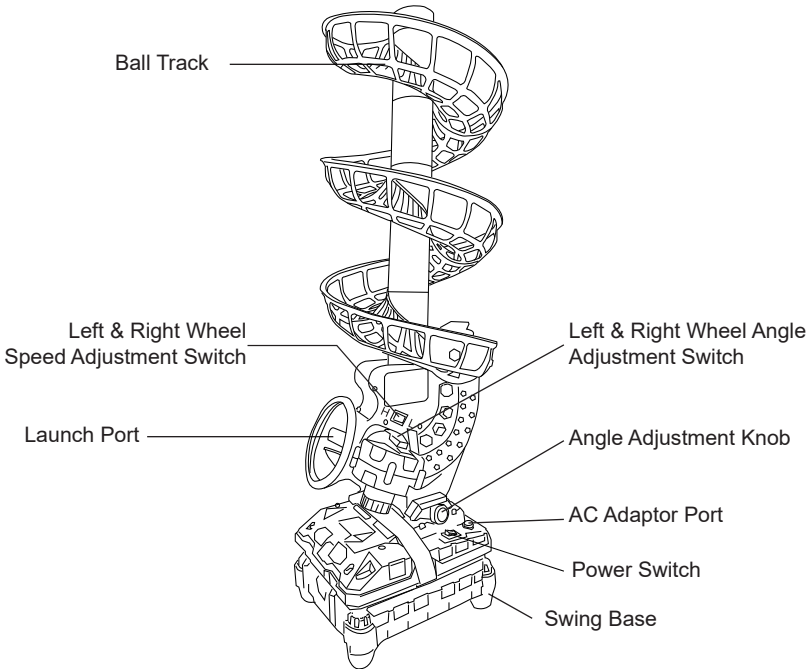


PACKAGE CONTENT

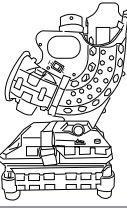		
Machine x 1	Ball Tracks x 5	Top Tracks x 1
		
Swing Base x 1	AC Adaptor x 1	6V Connector x 1
		
		Screw Driver x 1

Please make sure all parts are complete before use. If any items are missing or damaged, please contact us at services@furlihong.com.


INSTALLATION

MACHINE INSTALLATION

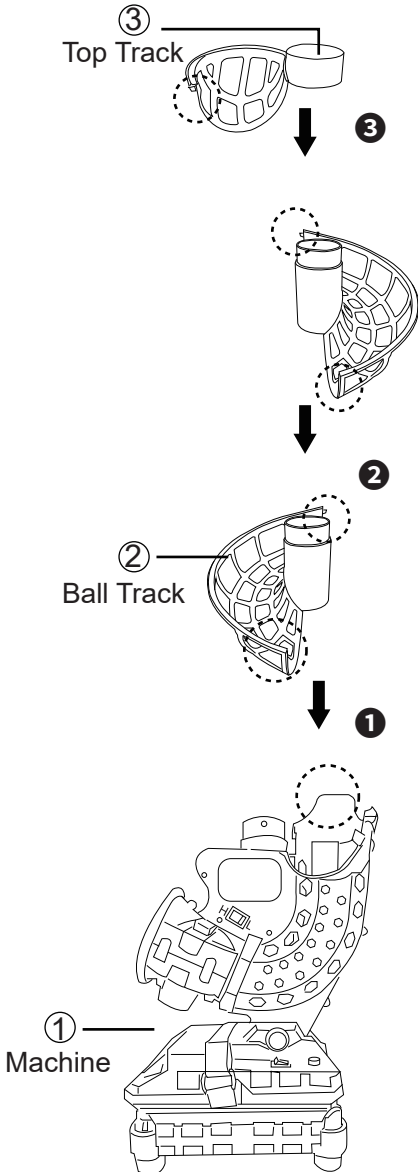

Note


Please gently squeeze the ball tracks if they are out of shape.

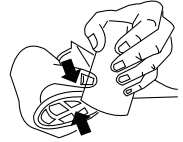


Step ③

Place the top track onto it, and ensure the ball tracks are firmly snapped into position.

Step ②

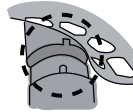

Assemble the ball tracks one and the other.

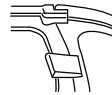

Ensure the ball tracks are firmly snapped into position.

Step ①




Connect the ball track with the machine, and make sure it is completely connected.




Make sure the ball tracks are connected properly with the machine.

SWING BASE INSTALLATION


- 1 Use the Velcro strap to secure the swing base and machine and fasten them.

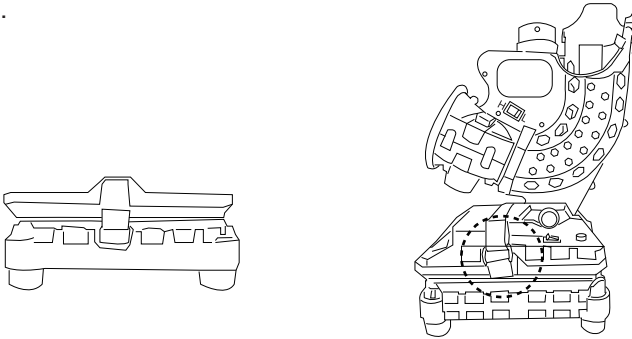

- 2 Connect the power plug from the machine to the swing base to transmit power. Please follow the arrows to properly secure or unsecure the power plug.

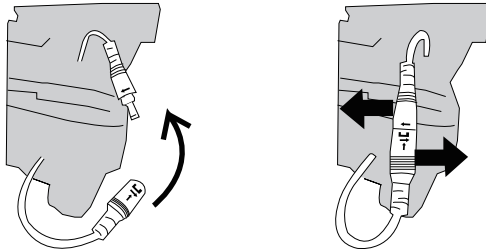


- 3 Turn on the button to activate the swing mode. (High/Low Speed Adjustable)

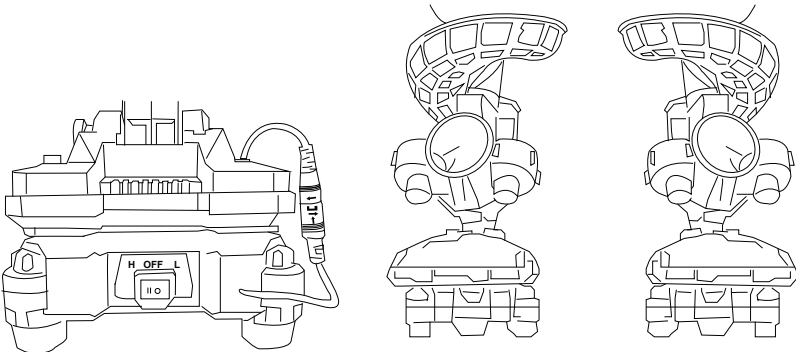


DRY BATTERIES INSTALLATION

- ✗ The battery box is at the bottom of the machine.
- ✗ Please turn off the machine before putting in the batteries.

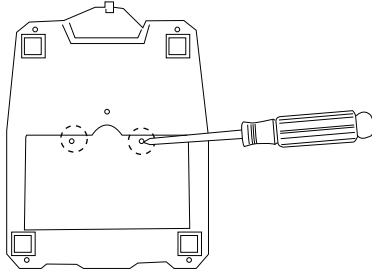

- 1 Unscrew the lid with a screwdriver.

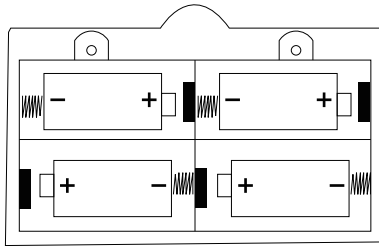


- 2 Assemble the battery according to the positive "+" and negative "-" signs.

After assembly, slide the door cover back and tighten the screws.

(Need 4 pcs of D-type dry batteries)

PRECAUTIONS FOR BATTERY INSTALLATION

- Battery installation must be performed by an adult.
- Do not mix different types of batteries.
- Do not mix new and old batteries.
- Remove batteries if the machine will not be used for an extended period.
- Ensure proper alignment of the '+' and '-' terminals.

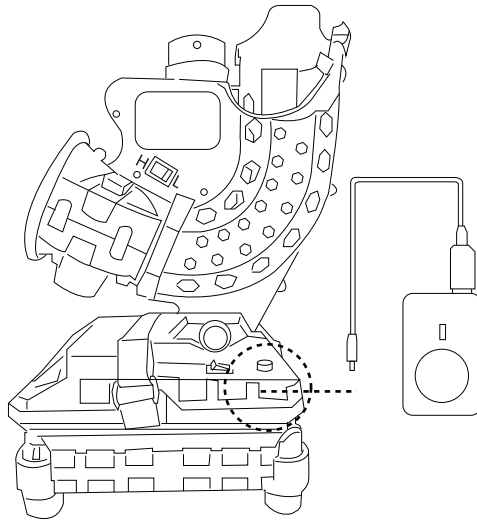

Note

If you choose to use a power bank to charge the machine, please use the included 6V connector to connect the machine to the power bank.

- **The output of the power bank must be at least 2A.**

Tips for Use:


1. Please use dry balls instead of wet ones, as the machine may not operate properly otherwise.
2. Before using the machine to feed balls, make sure it has fully started and reached full speed. Gradually transition from the lowest ball speed to the highest setting instead of starting immediately at the highest speed.
3. If the machine has insufficient power or voltage, the height and distance of the ball launched will be reduced. Please ensure that the machine has sufficient power and voltage.
4. Please ensure there are no balls in the ball launcher before turning the machine on. And make sure to turn off the machine before removing balls.

FEATURES

The wheel angle adjustment switch
(On both left & right of the machine)

The wheel speed adjustment switch
(On both left & right of the machine)

Angle adjustment knob



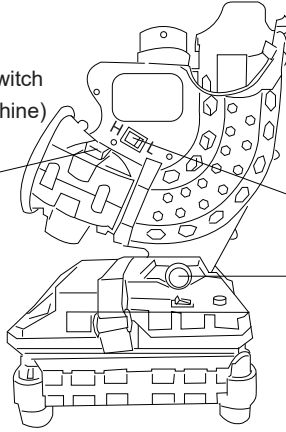


1 Spinning Modes

By adjusting different speeds on the left and right sides of the machine at the same time, the ball can spin left or right:



- Adjust the speed on the left to **HIGH** and the speed on the right to **LOW** to produce a spin ball to the right as shown in Figure 1.
- Adjust the speed on the left to **LOW** and the speed on the right to **HIGH** to produce a spin ball to the left as shown in Figure 2.

Left & Right Wheel
Speed Adjustment Switch

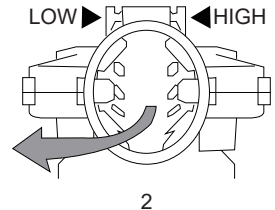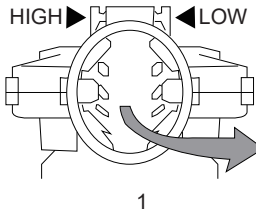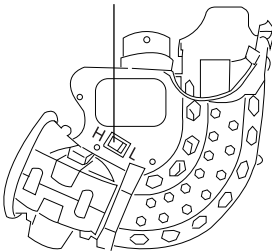

By simultaneously adjusting the left and right wheels in different directions, the machine can launch different curve balls:

- Adjust the wheel on the left to **"Up"** and the wheel on the right to **"Down"**, and the machine can launch curve balls as shown in Figure 3.
- Adjust the wheel on the left to **"Down"** and the wheel on the right to **"Up"**, and the machine can launch curve balls as shown in Figure 4.

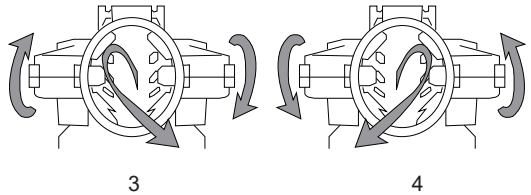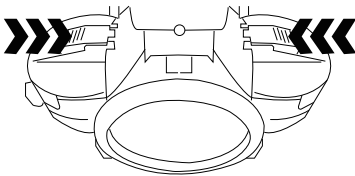


② 4 Angles Adjustable

Adjust the angle by pulling the knob, you could adjust the launch height of the machine.

(Make sure the position is adjusted correctly before loosening the knob.)


- **Serving height: 1ft to 8ft**
- **Serving distance: 17ft to 33ft**

The 4 angle settings of the machine, which, combined with the speed and direction adjustment of the wheels on the left and right sides of the ball launcher, enable you to produce a variety of spinning balls for practice.

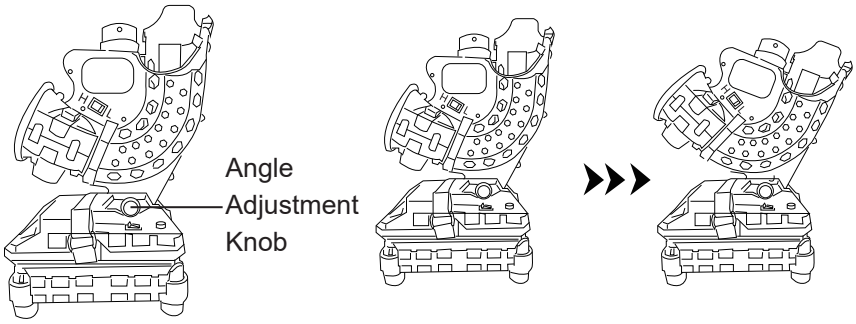

3 Tripod Connectivity

You can secure the machine on a camera tripod and adjust the height freely. The screw hole on the bottom of the machine is compatible with a standard camera tripod.

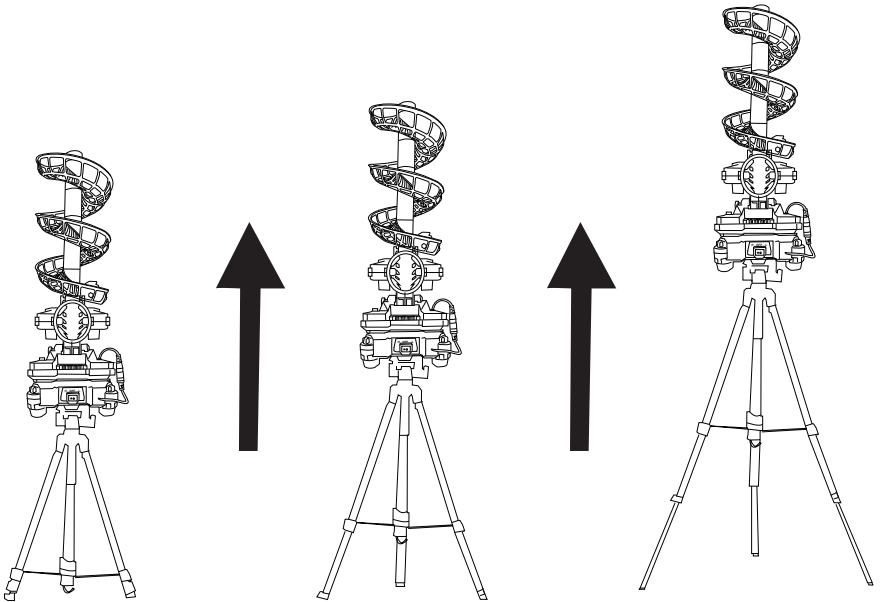

BASIC TROUBLESHOOTING

PROBLEMS	REASONS	SOLUTIONS
Doesn't drop ball.	Ball chutes not installed correctly.	Reinstall for full connection.
Power out.	Low batteries.	Replace with fresh ones.
	Damaged power adapter.	Replace with new one.
Insufficient launch height/distance.	Inadequate machine power/voltage.	Ensure sufficient power/voltage.
	Machine setup issues.	<ul style="list-style-type: none"> • Adjust the stand. • Adjust the wheel speed. • Adjust the wheel angle.
Machine stops working.	Power issues	<ul style="list-style-type: none"> • Battery: Replace batteries. • AC Power: Check the adapter for damage. • Power Bank: Verify if it is depleted.
	Other reasons.	Contact our customer service team.

WARRANTY & CUSTOMER SERVICE

We stand behind the quality of our products and are committed to providing exceptional customer service. Here's what you need to know about our warranty and how to reach us for assistance.

WARRANTY

Warranty Coverage:

Your Furlihong pickleball machine is backed by a 12-month warranty against defects in materials and workmanship. This warranty ensures your satisfaction and peace of mind with your purchase.

Exclusions from Warranty Coverage:

The warranty does not cover damage caused by misuse, improper handling, or unauthorized modifications. Normal wear and tear is also not covered under the warranty.

 
How to Submit a Warranty Claim:

If you encounter any issues covered under warranty, please reach out to our customer service team at services@furlihong.com. To expedite your claim, provide proof of purchase and a detailed description of the issue.

CUSTOMER SERVICE

For any questions, concerns, or assistance with your Furlihong pickleball machine, our customer service team is here to help. You can contact us via email at services@furlihong.com


Stay connected with us for updates and more! Follow our brand on social media:





 <https://furlihong.com>

 services@furlihong.com

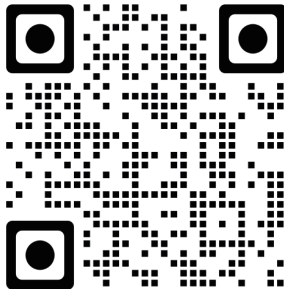

Scan the QR code to access the website instantly.