


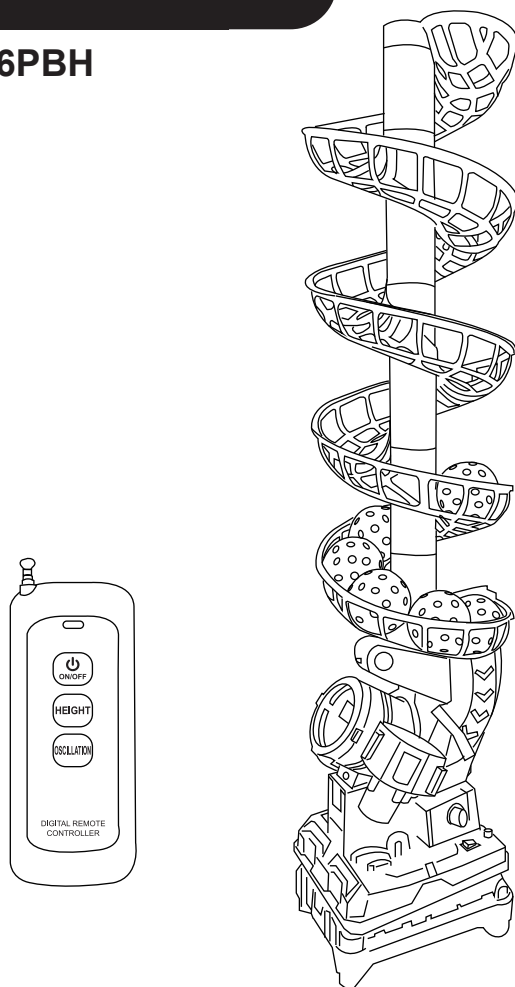

PICKLEBALL MACHINE

INSTRUCTION MANUAL

ZH-3816PBH



Please read the user manual carefully before using this product and keep it properly.

CONTENT

PRECAUTIONS	1
SPECIFICATION	1
PARTS DESCRIPTION	2
SWITCH FUNCTIONS	2
PACKAGE CONTENT	3
INSTALLATION	4
MACHINE INSTALLATION	4
SWING BASE INSTALLATION	5
DRY BATTERIES INSTALLATION	6
REMOTE CONTROL INSTRUCTIONS	7
FEATURES	9
BASIC TROUBLESHOOTING	10
WARRANTY & CUSTOMER SERVICE	11

PRECAUTIONS



Thank you very much for choosing Furlihong. Before using your Furlihong pickleball machine, please take a moment to review the following important safeguards to ensure safe and optimal operation:

- Do not use it in the rain or near dust or salt spray.
- Avoid getting the machine and battery box wet.
- Ensure the machine is used in a wide-open space of at least 15 meters.
- Children must play under adult supervision.
- Keep your face and hands away from the launcher when it's in use.
- Do not disassemble this product, as it may cause malfunction.
- Do not stand in front of the ball launcher when it's in operation.
- Do not place heavy objects on top of the machine.
- Use this product only for its intended purpose.
- Keep the machine away from high temperatures and fire.
- Wipe and clean the machine after each training session.

SPECIFICATION

Name	Pickleball Machine
Model	ZH-3816PBH
Size	9" x 7" x 43"
Weight	6.2 lb
Rated Voltage	9V
Rated Power	60W

PARTS DESCRIPTION

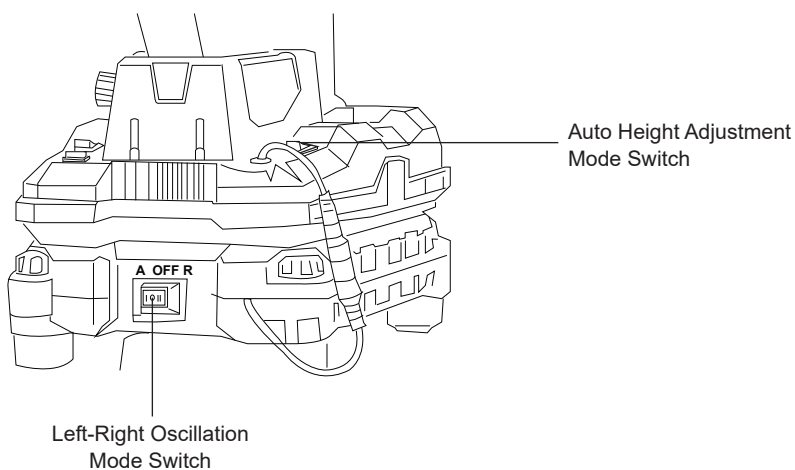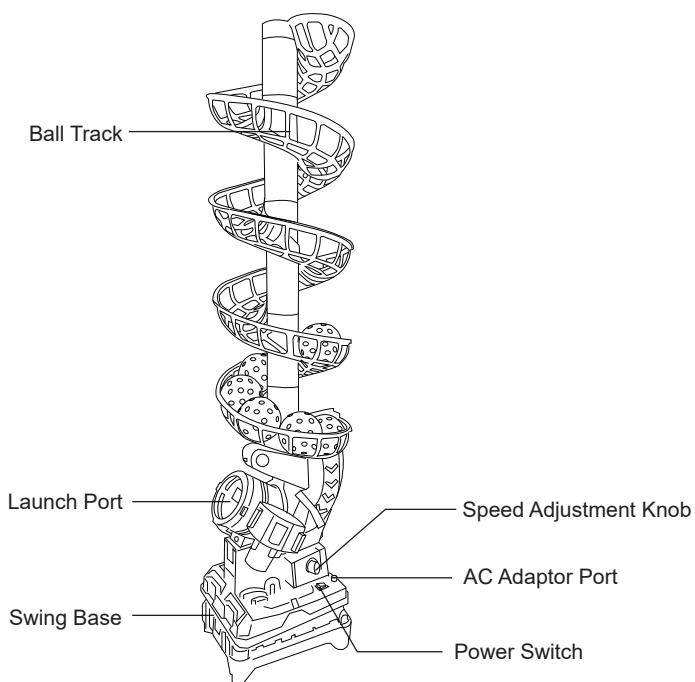

Switch Functions

1. Power Mode Switch

A: Machine starts and operates automatically

OFF: Power off

R: Machine power is controlled by the remote control

2. Auto Height Adjustment Mode Switch

A: Launch port moves up and down automatically

OFF: Auto height adjustment is off

R: Auto height adjustment is controlled by the remote control





3. Left-Right Oscillation Mode Switch

A: The machine oscillates left and right automatically

OFF: Left-right oscillation is off

R: Left-right oscillation is controlled by the remote control

PACKAGE CONTENT

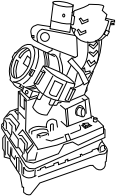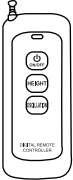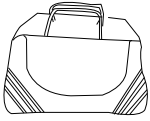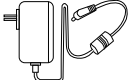		
Machine x 1	Remote Control x 1	Ball Tracks x 8
		
Swing Base x 1	Portable Bag x 1	
		
Swing Base x 1	Portable Bag x 1	Screw Driver x 1


Please make sure all parts are complete before use. If any items are missing or damaged, please contact us at services@furlihong.com.

INSTALLATION

MACHINE INSTALLATION


Note: Assembly of the machine must be performed by adults.

Note: Please gently squeeze the ball tracks if they are out of shape.

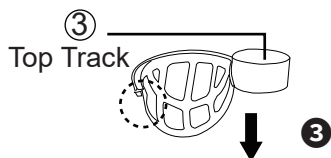


Step 3


Place the top track onto it, and ensure the ball tracks are firmly snapped into position.

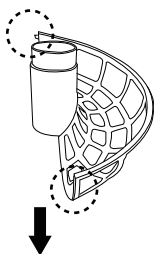


Step 2

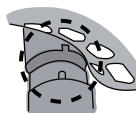

Assemble the ball tracks one and the other.

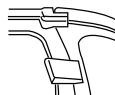

Ensure the ball tracks are firmly snapped into position.

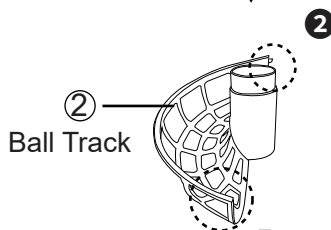


Step 1



Connect the ball track with the machine, and make sure it is completely connected.





Make sure the ball tracks are connected properly with the machine.

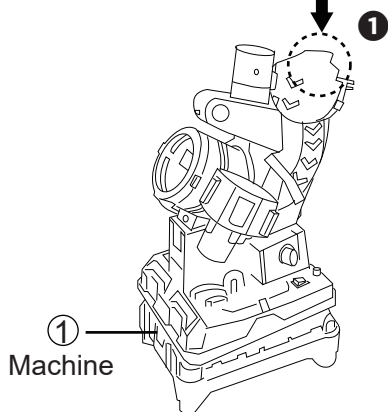

SWING BASE INSTALLATION

- 1** Secure the swing base to machine.

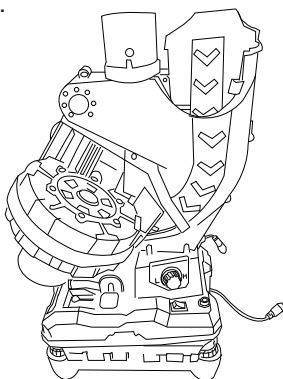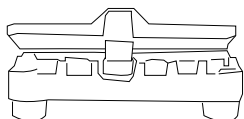

- 2** Connect the power plug from the machine to the base.
1. Align the notch on the plug with the raised guide inside the socket, then insert the plug.
 2. Tighten the locking nut securely after insertion.



Notch



Raised Guide




Locking Nut

- 3** Set the Left-Right Oscillation Switch to A (I) or R (II) to activate the swing base:

A(I): Machine oscillates left and right automatically

OFF(O): Function off


R(II): Control by remote control

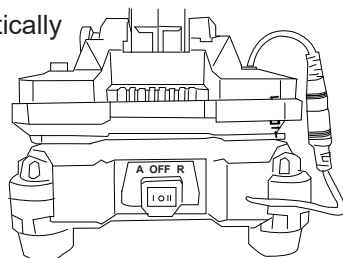


DRY BATTERIES INSTALLATION

- ✗ The battery box is at the bottom of the machine.
- ✗ Please turn off the machine before putting in the batteries.


1 Unscrew the lid with a screwdriver.

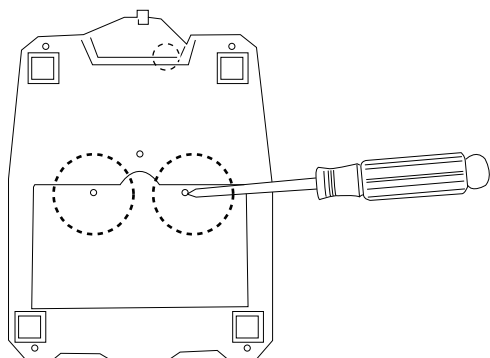

2 Please put batteries by following the positive and negative signs shown in the battery box. Close the lid and put the screws back.
(Need 6 pcs of D-type dry batteries)

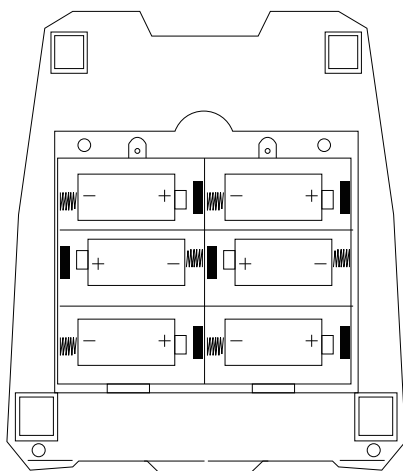

REMOTE CONTROL INSTRUCTIONS

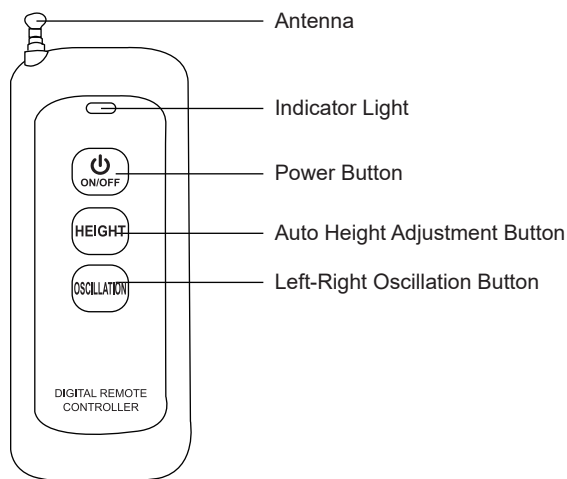

Battery

Use one **23A 12V alkaline battery**.

Operating Range

Up to 82 ft / 25 m without extending the antenna.

Up to 115 ft / 35 m with the antenna extended, depending on the environment.

Important

Set the corresponding switch on the machine to R before using the remote control.

Remote Control Pairing

The original remote control is pre-paired at the factory and is ready for use. No pairing is required before first use.

If the remote control is lost, please purchase a replacement remote control from us. To pair a new remote control with the machine:

1. Turn on the machine.
2. Within 10 seconds of power-on, press and hold the Power Button on the remote control for more than 3 seconds.
3. Once pairing is successful, the remote control will operate normally.

PRECAUTIONS FOR BATTERY INSTALLATION

- Battery installation must be performed by an adult.
- Do not mix different types of batteries.
- Do not mix new and old batteries.
- Remove batteries if the machine will not be used for an extended period.
- Ensure proper alignment of the '+' and '-' terminals.



Tips for Use:

1. Use dry balls only; wet balls may cause the machine to malfunction.
2. Allow the machine to start and reach full speed before feeding the balls fully. Gradually increase from the lowest to the highest speed.
3. Insufficient power or voltage reduces launch height and distance.
Ensure proper power supply.
4. Ensure no balls are in the launcher before starting the machine, and turn it off before removing balls.

FEATURES

① Auto Height Adjusting Mode

The machine supports automatic vertical movement of the launch port for varied ball trajectories.



Set the Auto Height Adjustment Switch to the desired position:

A (I): Launch port moves up and down automatically

OFF (O): Function off

R (II): Control by remote control

- Serving height: 1ft to 11ft
- Serving distance: 13ft to 52ft

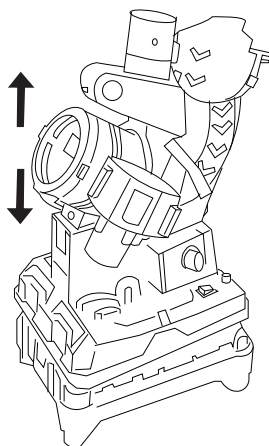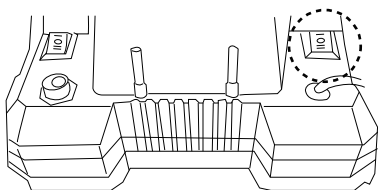

② Oscillating Mode




The machine automatically oscillates left and right for more varied training.

Set the Left-Right Oscillation Switch as follows:

A (I): The machine oscillates left and right automatically


OFF (O): Left-right oscillation is off

R (II): Left-right oscillation is controlled by the remote control

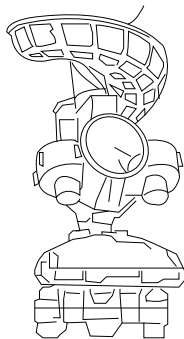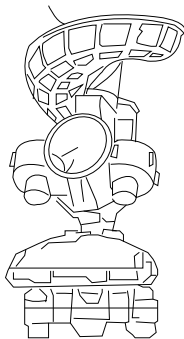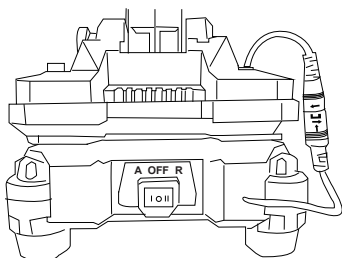

3 Tripod Connectivity

You can secure the machine on a camera tripod and adjust the height freely. The screw hole on the bottom of the machine is compatible with a standard camera tripod.

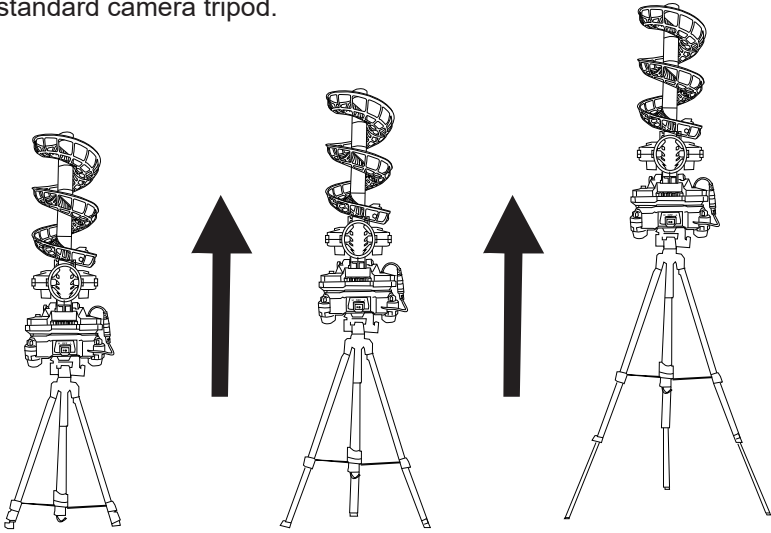

BASIC TROUBLESHOOTING

PROBLEMS	REASONS	SOLUTIONS
Doesn't drop ball.	Ball chutes not installed correctly.	Reinstall for full connection.
Power out.	Low batteries.	Replace with fresh ones.
	AC adapter damaged.	Replace with a new one.
Insufficient launch height/distance.	Inadequate machine power /voltage.	Ensure sufficient power/voltage.
	Machine setup issues.	• Adjust the speed. • Adjust the launch port angle.
Machine stops working.	Power issues.	• Battery: Replace batteries. • AC Power: Check the adapter for damage.
	Other reasons.	Contact our customer service team.

WARRANTY & CUSTOMER SERVICE

We stand behind the quality of our products and are committed to providing exceptional customer service. Here's what you need to know about our warranty and how to reach us for assistance:

Warranty Coverage:

Your Furlihong pickleball machine is backed by a 12-month warranty against defects in materials and workmanship. This warranty ensures your satisfaction and peace of mind with your purchase.

Exclusions from Warranty Coverage:

The warranty does not cover damage caused by misuse, improper handling, or unauthorized modifications. Normal wear and tear is also not covered under the warranty.

How to Submit a Warranty Claim:

If you encounter any issues covered under warranty, please reach out to our customer service team at services@furlihong.com. To expedite your claim, provide proof of purchase and a detailed description of the issue.

Customer Service:

For any questions, concerns, or assistance with your Furlihong pickleball machine, our customer service team is here to help. You can contact us via email at services@furlihong.com

Stay connected with us for updates and more! Follow our brand on social media:



@furlihongsports




@furlihong



www.furlihong.com



services@furlihong.com

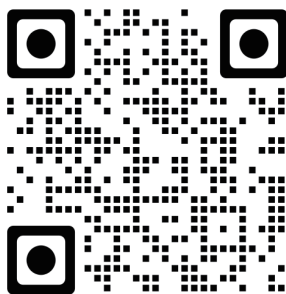

Scan the QR code to access the website instantly.